




Desk channel	Instr.	Mic / D.I	Stage box	Stand	Stage box	Location
1	Kick	B52	A1		1 Kick	A @ Drum riser
2	Snare top	e906	A2	Short boom	2 Snare top	
3	Snare btm	e906	A3		3 Snare btm	
4	Tom rack	e906	A4		4 Tom rack	
5	Tom floor 1	e906	A5		5 Tom floor 1	
6	Tom floor 2	e906	A6		6 Tom floor 2	
7	FX PAD	D.I	A7		7 FX PAD	
8	OH L	AT 2020	A8	Short boom	8 OH L	
9	OH R	AT 2020	A9	Short boom	9 OH R	
10	Snare 2	SM57	A10	Short boom	10 Snare 2	
11	X-Drum	D.I	A11		11 X-Drum	
12	Bass	D.I	B11		12 Voc Ari	
13	Key L	D.I	B1		1 Key L	B @ Stage right
14	Key R	D.I	B2		2 Key R	
15	Pno L	D.I	B3		3 Pno L	
16	Pno R	D.I	B4		4 Pno R	
17	Org L	D.I	C1		5 HD 1	
18	Org R	D.I	C2		6 HD 2	
19	Key L	D.I	C3		7 HD 3	
20	Key R	D.I	C4		8 HD 4	
21	Ac gtr	D.I	C5		9 HD Click	
22	Gtr	SM57	C6		10 Voc Mikko	
23	Voc Mikko	e935	B10	Tall boom	11 Bass	
24	Voc Ari	e935	A12	Short boom	12 Amb L	
25	Voc Jaska	e935	C7	Tall boom	1 Org L	C @ Stage left
26	Voc Olli	WLS dpa d:facto	Digico D2		2 Org R	
27	HD 1	D.I	B5		3 Key L	
28	HD 2	D.I	B6		4 Key R	
29	HD 3	D.I	B7		5 Ac gtr	
30	HD 4	D.I	B8		6 Gtr	
31	HD Click	D.I	B9		7 Voc Jaska	
32	Amb L	NT5	B12	Tall boom	8 Amb R	
33	Amb R	NT5	C8	Tall boom	9 n/c	
	WLS Antenna			Tall boom	10 n/c	
					11 n/c	
					12 n/c	
Tuomme omat rumpumikit ja d.i.-boxit. Talolta e935:t ja NT5:t (tai vastaavat), sekä mikkiständit ja mikkipuhat. Mukanamme on langaton korvamonitorointi ja tarvitsemme talolta sidefilit, omissa ryhmissään.				Tuomme myös lavarasiat & -kaapelit, mutta jos talolla on käytössä LK37 -kaapelointi, käytämme sitä. Tarvitsemme monitoritiskille 3x16A voimavirran, sekä valoille 3x32A lavan takaosaan. Etupään ja lavan välille tarvitsemme 2 kpl Cat-5e kaapelia, 1 valoille ja 1 äänelle.		

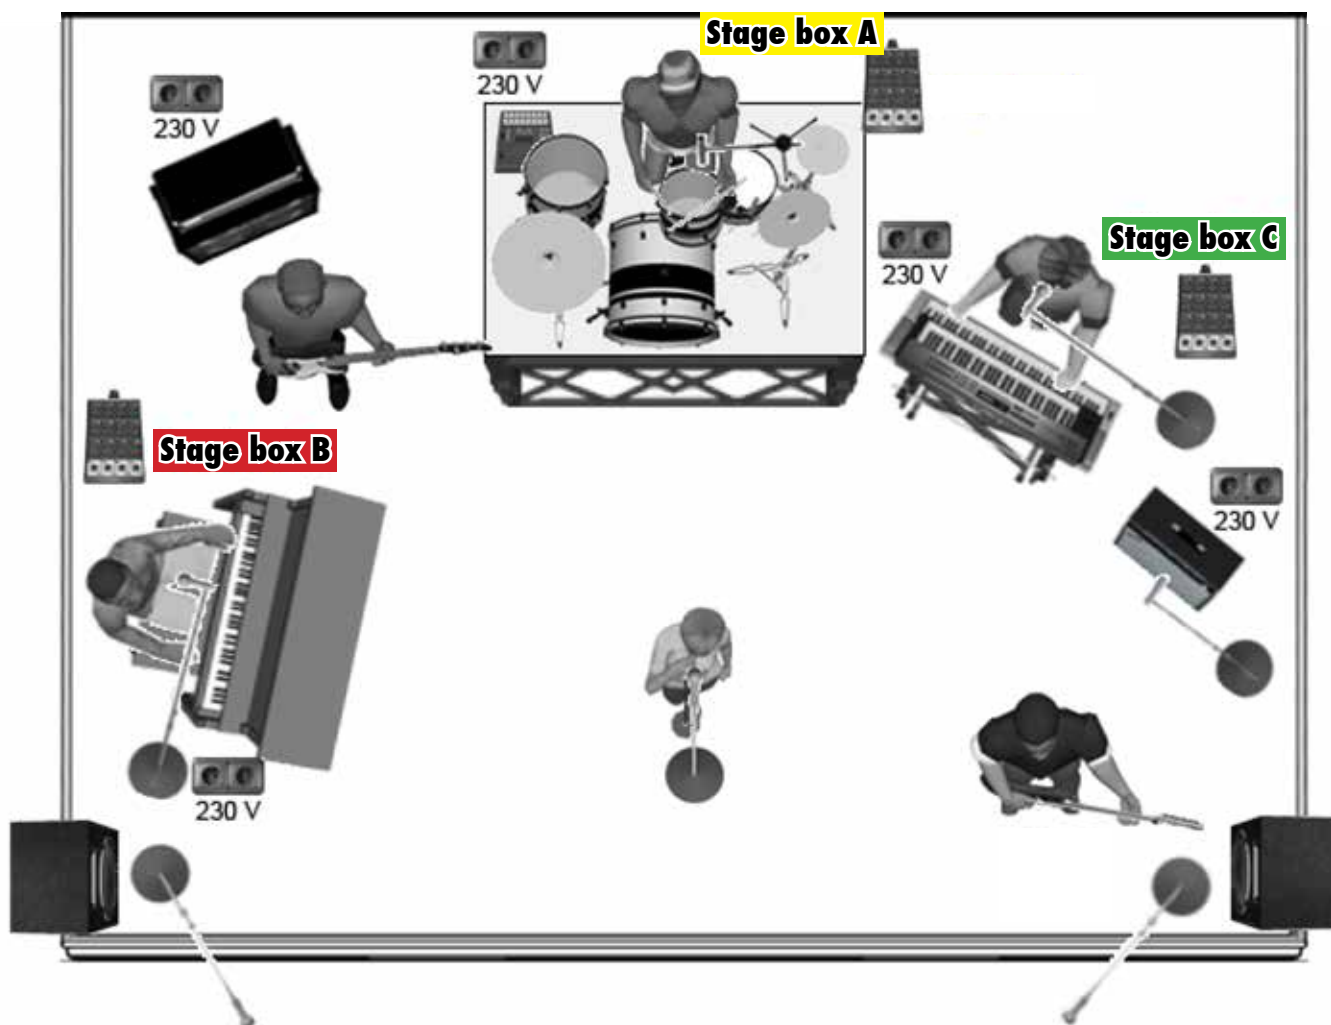

Etupää :	Pasi Ristolainen	0400-721041	pasi@pasiristolainen.com
Valopää :	Aki Rantala	0400-641992	aki.rantala@ruosila.com
Apupää :	Teemu Lehtimäki	0400-597506	teemulehtimaki@hotmail.com (KAIKKI YLEISET ASIAT)
Lavapää :	Timo Toppari		toppari@me.com

YO